



# *Bob Timberlake Square Granite Fire Pit with Metal Fire Insert, Cooking Grate & Lid*




## INSTRUCTIONS


 **NOTE:** READ INSTRUCTIONS BEFORE USING YOUR FIRE RING, USE EXTREME CAUTION AT ALL TIMES WHILE IN USE!


 **SAFETY NOTICE:** DO NOT INSTALL IN OR ON RECREATIONAL VEHICLES AND/OR BOATS, FOR YOUR SAFETY.


 **WARNING:** FAILURE TO FOLLOW THE DANGERS, WARNING AND CAUTIONS CONTAINED IN THIS OWNERS MANUAL MAY RESULT IN SERIOUS BODILY INJURY OR DAMAGE TO PROPERTY.


 **WARNING!** CARBON MONOXIDE HAZARD! BURNING WOOD OR CHARCOAL PRODUCES CARBON MONOXIDE, WHICH HAS NO ODOR AND CAN KILL YOU IF BURNED IN ENCLOSED AREAS. NEVER BURN WOOD OR CHARCOAL INSIDE HOMES, VEHICLES, TENTS OR ANY OTHER ENCLOSED AREAS.


1.  **NEVER** start a fire with gasoline, kerosene, diesel fuel or any other petroleum-based accelerants!


2.  **DO NOT:** Burn on wood surface or any surface which is combustible or flammable! Check with your local municipality or fire district before using an outdoor wood burning fire pit!


3.  **DO NOT:** Use indoors! The fire pit is designed for outdoor use only! If used indoors, toxic fumes will accumulate and cause serious bodily injury or death!


4.  Your fire pit is hot while burning! Use **extreme caution** with children and pets when fire pit is burning!


5.  When using the fire pit, exercise the same caution that you would with campfire!


6.  **DO NOT:** Operate your fire pit unless it is on level surface!


7.  **DO NOT:** Use your fire pit in a garage, building breezeway or any other enclosed area!


8.  **DO NOT:** Use your fire pit under, on and around any overhead construction or low hanging branches, dry grass, brush piles, wood piles awnings, wood furniture, propane, flammable gases or vapors, paper, compressed paper, plastic and plexiglass or anything combustible.

9.  **DO NOT:** Leave your fire pit unattended! Keep a fire extinguisher on hand when you have a fire going.

10.  Position your fire pit so that it is shielded from strong wind and gusts!

11.  Always start with small fires, this will help you determine how the fire will behave in your fire pit .

12.  Use caution when removing ashes and coals from fire pit. Dispose ashes in tight sealed metal containers. Use dirt or sand to smother the ashes out.

12.  A minimum of **4'(fourfoot)** must be maintained from any combustible materials while in operation. Follow local codes and specific safety instructions for your area.

# Installing Fire Pit

- ◆ When selecting a location for your fire pit it is important to consider the required clearances to all combustibles.
- ◆ Locate the fire pit, a **minimum of 4'(fourfoot)** must be maintained between your fire pit and any combustible materials with **NO COMBUSTIBLES OVER HEAD** while in operation. Follow local codes and specific safety instruction for your area.

## Installation:

### 1. Installing Granite pad for fire pit:

Note: Place the Granite fire pit pad in an area that meets the required clearances to all combustibles. Place the Granite fire pit pad on a noncombustible surface such as dirt with no grass or combustible materials in the area. Make sure the area for the fire pit is level and flat.

Follow the manufactures Granite installation instructions for installation of Granite pad for the fire pit. After removing the Timberlake fire pit ring from the packing, place fire pit ring in center location on Granite pad and install Granite around fire pit ring, per manufactures' Granite installation instructions.

### 2. Installing Cooking Grate Support Rod:

Install Cooking Grate support rod into the rod holder in the side of fire ring.

### 3. Installing Cooking Grate:

Place the Cooking Grate onto the Cooking Grate Support Rod and use the T-Locking Bolt to adjust the height of the Cooking Grate.

### 4. Installing Fire Pit Lid:

Place the Fire Pit Lid onto the fire pit with the notch in the lid around the Grate Support Rod.

## Cooking Grate:


The Fire Ring has an adjustable Cooking Grate. Adjust the Cooking Grate by tightening or loosening the T-LOCKING BOLT on the Cooking Grate. See Picture Below. This is also used for removing the Cooking Grate for cleaning and storage. NOTE: When cooking on the Cooking Grate, always use tinfoil, pots or pans and Cooking Grate.

- ◆ **NOTE: The manufacturer recommends that for maximum performance burn natural seasoned hardwood.** Lay several pieces of dry kindling on top of newspaper in the Fire Pit. Place several pieces of natural seasoned hardwood or hickory wood on kindling. Light newspaper. Don't leave fire unattended at this point. NOTE: The cooking Grate is HOT at this time and should not be touched without adequate protection. After embers and a coal bed have been established, load Fire Pit with seasoned natural hardwood as desired for cooking. Your Bob Timberlake Fire Pit with cooking Grate is ready for use..

**COOKING GRATE  
SUPPORT ROD**



**COOKING GRATE**

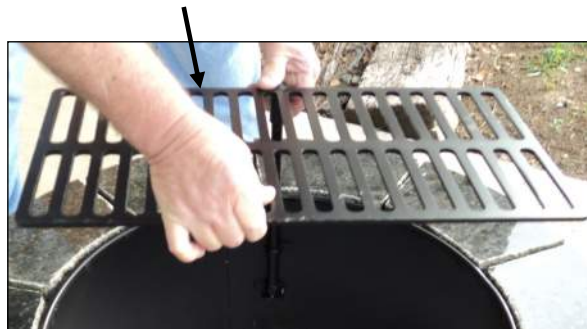

**T - LOCKING BOLT**



NOTE: Always keep safety in mind when disposing of hot ashes. Pour water on them until out. Dig hole and bury ashes; transport ashes using metal container with lid.