


**MODEL 32**  
**MAY BE INSTALLED IN A SOLID FUEL BURNING FIREPLACE, AS A  
FREESTANDING FIREPLACE OR WITH AN  
OPTIONAL WOODEN SURROUND**



VENT-FREE

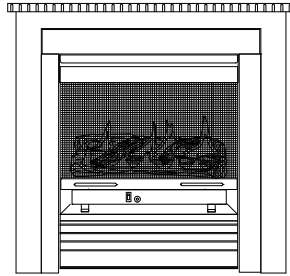

**WARNING:** If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

**WHAT TO DO IF YOU SMELL GAS**

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

This is an unvented gas-fired heater. It uses air (oxygen) from the room in which it is installed. Provisions for adequate combustion and ventilation air must be provided. Refer to section "Producing Adequate Ventilation" page 12.

This appliance may be installed in an aftermarket, permanently located, manufactured (mobile) home, where not prohibited by local codes.

This appliance is only for use with the type of gas indicated on the rating plate. This appliance is not convertible for use with other gases.

**WARNING**

This appliance is equipped for (natural or propane) gas .  
Field conversion is not permitted.

**INSTALLER:** Leave this manual with the appliance.  
**CONSUMER:** Retain this manual for future reference.

Manufacturer: NEW BUCK CORPORATION  
P.O. Box 69  
8000 Highway 226 South  
Spruce Pine, NC 28777

**This appliance is intended for supplemental heating.**

Revised December 2006

















































































